




Model P4R Receiver User Guide

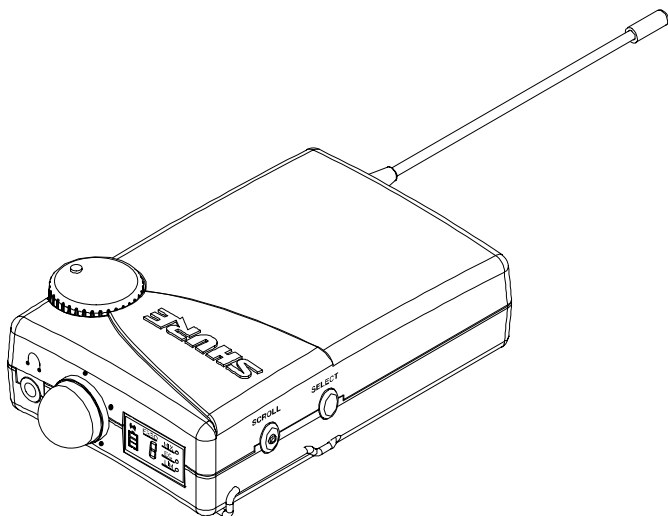

P4R Receiver

for use with the PSM[®] 400 Wireless Personal Monitor System



**WARNING!**

**USING THIS SYSTEM AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE.
USE AS LOW A VOLUME AS POSSIBLE.**

In order to use this system safely, avoid prolonged listening at excessive sound pressure levels. Please use the following guidelines established by the Occupational Safety Health Administration (OSHA) on maximum time exposure to sound pressure levels before hearing damage occurs.

90 dB SPL at 8 hours
95 dB SPL at 4 hours
100 dB SPL at 2 hours
105 dB SPL at 1 hour
110 dB SPL at 1/2 hour
115 dB SPL at 15 minutes

120 dB SPL — avoid or damage may occur

It is difficult to measure the exact Sound Pressure Levels (SPL) present at the eardrum in live applications. In addition to the volume setting on the PSM, the SPL in the ear is affected by ambient sound from floor wedges or other devices. The isolation provided by the fit of quality earphones is also an important factor in determining the SPL in the ear.

Here are some general tips to follow in the use of this product to protect your ears from damage:

1. Turn up the volume control only far enough to hear properly.
2. Ringing in the ears may indicate that the gain levels are too high. Try lowering the gain levels.
3. Have your ears checked by an audiologist on a regular basis. If you experience wax buildup in your ears, stop using the system until an audiologist has examined your ears.
4. Wipe the earphones with an antiseptic before and after use to avoid infections. Stop using the earphones if they are causing great discomfort or infection.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

FCC Statement. The P4R Receiver complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device does not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications to Approved Equipment. Changes or modifications not expressly approved by Shure Incorporated could void your authority to operate this equipment.

Thank you for buying the P4R Receiver. The P4R is a component in the PSM[®] 400 family of wireless personal monitors. When used with a P4T Transmitter, it provides the many advantages of a wireless, in-ear monitoring system, including:

- **Improved Sound Quality** - high fidelity without the risk of feedback,
- **Increased Mobility** - your mix moves with you,
- **Personal Control** - through volume adjustment and MixMode[®].

For further information on the PSM 400 system, see the PSM 400 Wireless Personal Performance Pack user's guide, available on the world wide web at www.shure.com.

P4R RECEIVER FEATURES


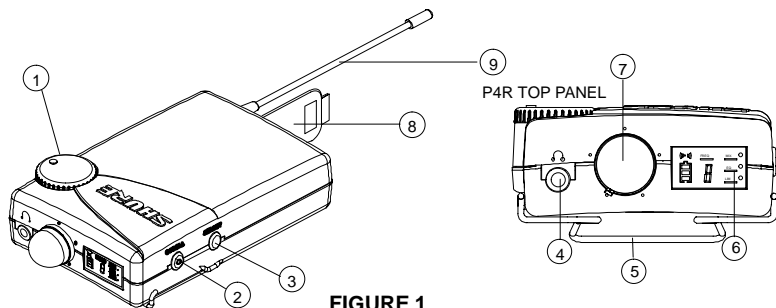


FIGURE 1

1. **Balance Knob:** This thumbwheel adjusts the left/right balance when the unit is in stereo and the mix 1/mix 2 balance when the unit is in MixMode.
2. **SCROLL Pushbutton:** Use with the SELECT pushbutton to control the functions in the LCD screen. See *Pushbutton Controls* on page 6.
3. **SELECT Pushbutton:** Use with the SCROLL pushbutton to control the functions in the LCD screen. See *Pushbutton Controls* on page 6.
4. **1/8" Earphone Output Jack:** Connects to E1 or E5 earphones.
5. **Belt Clip:** Securely attaches the receiver to a belt, guitar strap or waist band.
6. **LCD Screen:** The LCD screen displays the status of various functions. See *LCD Screen* on page 4.
7. **ON/OFF/VOLUME Knob:** Turn clockwise past click to turn ON. Continue to turn clockwise to increase volume, counterclockwise to decrease volume.
8. **Battery Compartment Door:** See *Battery Installation* on page 4.
9. **Antenna:** An attached, flexible whip antenna receives radio frequency (RF) from the transmitter.

QUICK SET UP

1. Set up and activate a P4T transmitter according to directions in the P4T user's guide.
2. Open the battery door of the P4R receiver and insert a 9V alkaline battery, following the correct +/- alignment. See *Battery Installation* on page 4.
3. Turn the ON/OFF/VOLUME knob clockwise past click (ON). Keep volume set at minimum.
4. Set the P4R to the same reception channel as the P4T. See *Changing Reception Channel* on page 6.
5. Check the LCD screen to see if RF () is being received. See *LCD Screen* on page 4.
6. Plug earphones into earphone output jack.
7. Insert earphones into your ears as instructed in the earphone's user guide.
8. Increase the volume to a comfortable listening level.



WARNING: High volume levels may cause hearing damage!

9. Set the desired functions in the LCD screen. See *LCD Screen* on page 4, and *Pushbutton Controls* on page 6.

BATTERY INSTALLATION

1. Open the battery compartment door by pushing down and sliding towards antenna.
2. Insert a fresh 9V alkaline battery with the +/- terminals properly positioned (see Figure 2).
3. Close the battery compartment door.

NOTE: If battery compartment door will not close, the battery is not properly inserted.




FIGURE 2

LCD SCREEN

The LCD screen on the top panel displays the status of various functions. The status of these functions can be changed using the SCROLL and SELECT pushbuttons (see *Pushbutton Controls* on page 6).

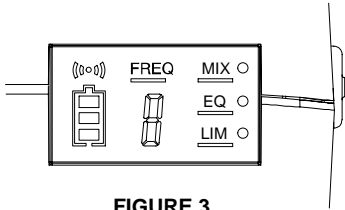


FIGURE 3

Symbol	Function	Status Indication
	Radio Frequency (RF)	Present or Not Present
	Battery Life	High, Medium or Low
FREQ	Reception Channel	Channel 0-9, A-F
MIX	MixMode	On or Off
EQ	High Frequency Equalization	On or Off
LIM	Limiter	On or Off

FUNCTION DEFINITIONS

RF (): Indicates the P4R receiver is receiving a transmission. Always check for RF reception prior to inserting earphones into ears.

BATTERY LIFE (): Indicates the approximate amount of voltage left in the battery. These voltages translate to time as follows:

	HIGH: Four to eight hours of operation.		MEDIUM: One to four hours of operation		LOW: Less than one hour of operation
--	--	--	---	--	---

If no bars are present within the battery life gauge, change the battery immediately.

NOTE: Battery life depends on many variables, including battery type (brand), earphones used, and receiver volume setting.

RECEPTION CHANNEL (FREQ): The P4R receiver features 16 preset, user-selectable channels (0-9 and A-F). The P4R receiver must be set to the same channel as its transmitter.

MIXMODE (MIX): The P4R receives the monitor mix in either MixMode (MIX ON) or stereo (MIX OFF). See *MixMode/Stereo* on page 5.

NOTE: If the P4R is receiving only one signal, it will be in mono.

HIGH FREQUENCY EQUALIZATION (EQ): Adds 6 dB at 10 kHz for increased treble response.

LIMITER (LIM): The limiter provides protection against loud signals.



WARNING! Turning the Limiter OFF defeats protection against hazardous sound levels!

MIXMODE/STEREO

The P4R receiver receives two signals (1/L and 2/R) from the P4T transmitter. The P4R processes these signals in either stereo or MixMode:

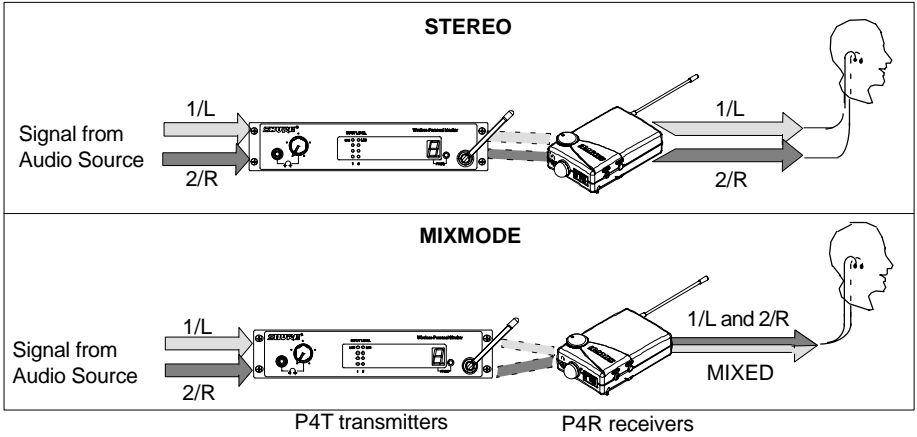


FIGURE 4

STEREO: In stereo, the signals remain separate so 1/L is heard through the left earphone and 2/R is heard through the right earphone. The balance knob on the receiver adjusts the balance between the left and right earphones.

MIXMODE: In MixMode, the signals are “mixed” in relation to one another using the balance knob, blending into one signal. The mixed signal is sent to *both* the left and right earphones.

Using MixMode

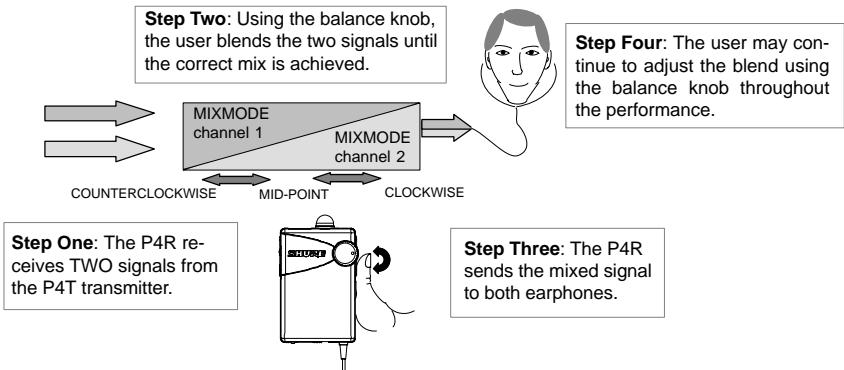


FIGURE 5

MIXMODE IN APPLICATIONS

MixMode is most useful when two distinct mixes are provided to the P4T transmitter, such as a band mix and a vocal mix. MixMode combines these two signals into one monitor mix and allows you to control this mix *during* the performance with the P4R receiver. For example, if the band overpowers the vocals in the mix, increase the level of the vocals and decrease the level of the band by simply adjusting the balance knob.

PUSHBUTTON CONTROLS

USING SCROLL AND SELECT PUSHBUTTONS

Push either pushbutton to activate the LCD screen. Push and hold the SCROLL pushbutton to scroll through the functions. The current function is underscored. Use the SELECT pushbutton to change the status of the underscored function.

CHANGING RECEPTION CHANNEL

1. Push and hold the SCROLL pushbutton.
2. Scroll to FREQ.
3. Push the SELECT pushbutton to select a channel (0–9 or A–F).

NOTE: Use the same reception channel as the the matching P4T transmitter.

4. Push the SCROLL pushbutton to confirm changes.

CHANGING MIXMODE, HIGH FREQUENCY EQUALIZATION AND LIMITER STATUS.

1. Push and hold the SCROLL pushbutton. Scroll to the desired function (MIX, EQ, or LIM).
2. Push the SELECT pushbutton to toggle the function ON or OFF. A function is ON when a dot appears to the right of the function symbol.
3. Push the SCROLL pushbutton to confirm changes.

LOCKING OUT THE LCD SCREEN

Once the P4R's functions are set for use, lock out the LCD screen and pushbuttons to prevent unwanted changes during or between performances. Use the following instructions to lock out the front panel:

1. Set all functions to desired settings.
2. Hold down the SCROLL and SELECT pushbuttons simultaneously for five seconds (Figure 6 [A]).

NOTE: The reception channel will be replaced by dashes (Figure 6 [B]) when lock-out is engaged.

3. When lock out is engaged, the SCROLL and SELECT pushbuttons light the LCD display, but cannot change the status of any of the functions.
4. To disengage the lock out, hold the SCROLL and SELECT pushbuttons for five seconds until the reception channel is displayed again.

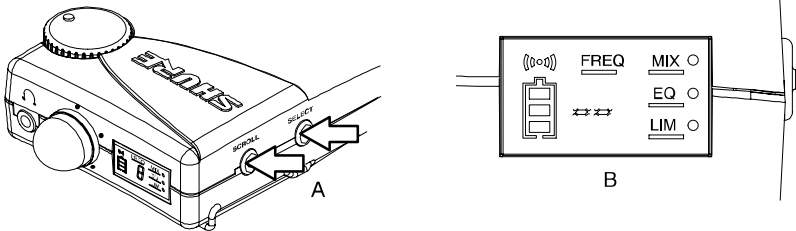


FIGURE 6

SPECIFICATIONS

RF Frequency Range
722 to 865 MHz (country dependent)

Operating Range
300 feet (environment dependent)

Audio Frequency Response
50 Hz to 12 kHz (± 3 dB)

RF Sensitivity
1 μ V typical

Image Rejection
55 dB typical

Spurious Rejection
60 dB typical

Squelch Threshold
4.5 μ V typical

Antenna
attached whip

Power Requirements
9 V alkaline battery, Duracell® type
MN1604 recommended

Battery Life
up to 8 hours, volume dependent

Audio Output Connector
3.5 mm Stereo
(Left = tip, Right = ring, Ground = sleeve)



Minimum Load Impedance
16 Ω

Net Weight
125 g (.28 lbs.)

Overall Dimensions
82.6 mm X 63.5 mm X 26.2 mm
(3 1/4 in. X 2 1/2 in. X 1 1/32 in.)

CERTIFICATION

Approved under the DECLARATION OF CONFORMITY provision of FCC Part 15. Certified by IC in Canada under RSS-123. Conforms to European Union Directives, eligible to bear CE marking. Meets requirements of European wireless EMC standard ETS 300-445.

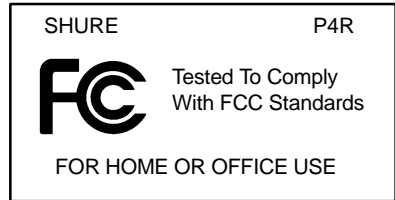

Declaration of Conformity

We of

Shure Incorporated
222 Hartrey Ave.
Evanston IL 60202-3696 U.S.A.
847-866-2200

declare under our sole responsibility that the following product,

Model: P4R Name: P4R Receiver

was tested and found to comply with Part 15 of the FCC rules.


Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Testing was completed by the following NVLAP or A2LA accredited laboratory:

CETECOM GmbH
66117 Sarbrücken
Untertürkheimer StrBe 6-10
Deutschland
telephone +49 681 598 - 0
fax +49 681 598 - 9075

Shure Incorporated., Manufacturer.

Signed:



Date: April 15, 2000

Name, Title: Craig Kozokar, Project Engineer



SHURE Incorporated Web Address: <http://www.shure.com>
222 Hartrey Avenue, Evanston, IL 60202-3696, U.S.A.
Phone: 847-866-2200 Fax: 847-866-2279
In Europe, Phone: 49-7131-72140 Fax: 49-7131-721414
In Asia, Phone: 852-2893-4290 Fax: 852-2893-4055
Elsewhere, Phone: 847-866-2200 Fax: 847-866-2585